

# AR-快拆槍膛 AR-SERIES QUICK-DETACH CHAMBER



·AR平台槍膛快拆技术方案 (适用平台: AR-15/M4/M16 衍生系統-兼容多数第三方魚骨固定設計):  
·第一步先退彈並拆卸彈匣、分離槍下身、移除拉機柄和槍機。

·AR-Platform Chamber Quick-Detach Technical Solution  
(Compatible Platforms: AR-15/M4/M16 Derivative Systems - Supports Most Third-Party Handguard Fixation Designs):  
Step 1: Unload and remove the magazine, separate the lower receiver, then remove the charging handle and bolt carrier group (BCG).



·手或工具輔助往槍管的方向撥動 Hop up 調節輪，直至調節輪出現缺口(1)。


·Use your hand or a tool to turn the hop-up adjustment wheel toward the barrel direction until the notch (1) appears on the wheel.




·豎起調節器擺桿(1)，此時即可將擺桿拆出(2)。

·Lift up the Hopup Arm (1), which can then be removed at this point(2).

## 3D 示意圖 3D SCHEMATIC

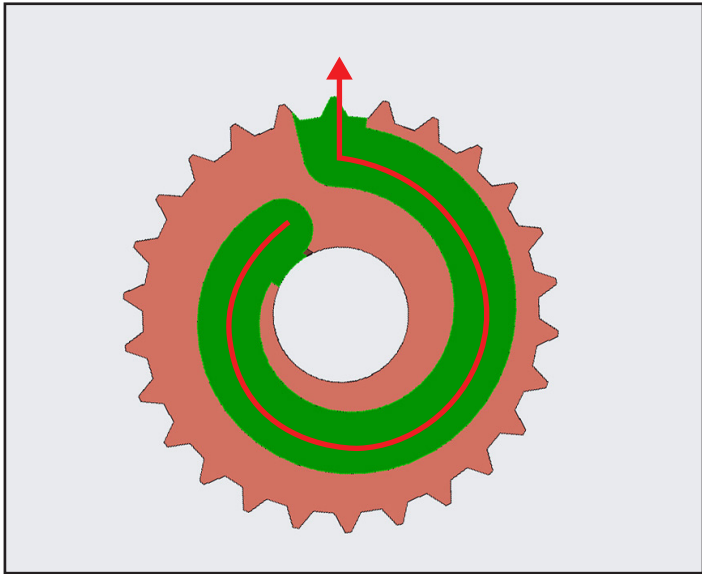

·調節輪內部軌道 3D圖  
·3D Schematic of Internal Track in Hopup Wheel

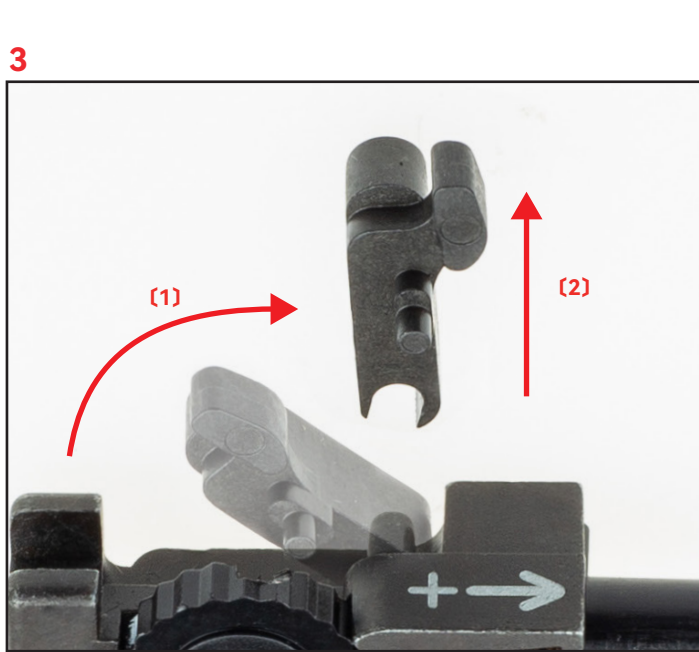


·豎起調節器擺桿(1)，此時即可將擺桿拆出(2)。



·一字螺絲刀推開槍膛的兩個鎖死零件，並使用拆卸輔助工具卡住防止回彈。(可包裹工具頂端以防刮花零件)  
·Use a flathead screwdriver to disengage the two locking components in the chamber. Secure them with a disassembly assist tool to prevent recoil. (Wrap the tool's tip to prevent scratching components)



·解除鎖定後，使用接近內槍管直徑(約8.5mm)的圓形塑料棒或其他內槍管，將內槍管和槍管座從槍口端頂出。  
·After disengaging the lock mechanism, use a plastic rod (with a diameter matching the inner barrel — approx. 8.5mm) or a spare inner barrel to push the inner barrel and barrel assembly out from the muzzle end.

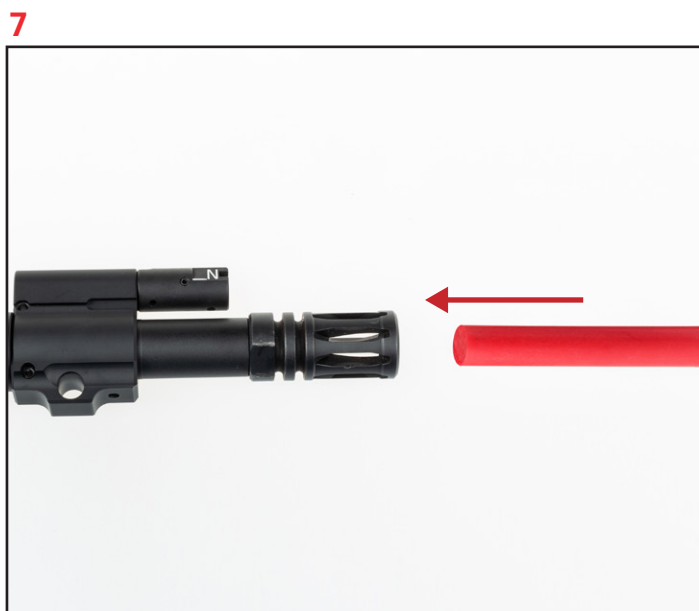

·抽出內槍管，即可對槍管進行保養。  
·Extract the inner barrel to proceed with barrel maintenance.



## 安裝關鍵點 CRITICAL INSTALLATION POINTS



·裝回內槍管前，請確保內管座安裝好，特別注意裡面的膠粒是否安裝到位。  
·Before reinstalling the inner barrel, ensure the inner barrel base assembly is properly installed, with particular attention to the correct positioning of the Hopup Tensiometer.



·把內管座推入槍膛時，要從兩邊壓著保持內管座閉合。推至盡頭後抽出拆卸輔助工具，檢查兩個彈性卡榫是否已經重新彈出到位。  
·Reinstall the adjuster rocker arm. Apply gentle downward pressure to hold the rocker arm in place, then turn the hop-up adjustment wheel toward the plus (+) direction to lock the rocker arm (1). This completes the installation.



·裝回調節器擺桿，稍稍用力向下壓著擺桿，往加號(+)的方向撥動 Hop up 調節輪，鎖死擺桿(1)，本次教程完成。  
·Reinstall the adjuster rocker arm. Apply gentle downward pressure to hold the rocker arm in place, then turn the hop-up adjustment wheel toward the plus (+) direction to lock the rocker arm (1). This completes the installation.

