



彈匣拆卸維修工具 MAGAZINE REPAIR TOOL

此工具用於輔助 TM 彈匣外殼的拆卸與組裝作業。
THIS TOOL ASSISTS IN THE DISASSEMBLY AND REASSEMBLY OF TM MAGAZINE HOUSINGS.

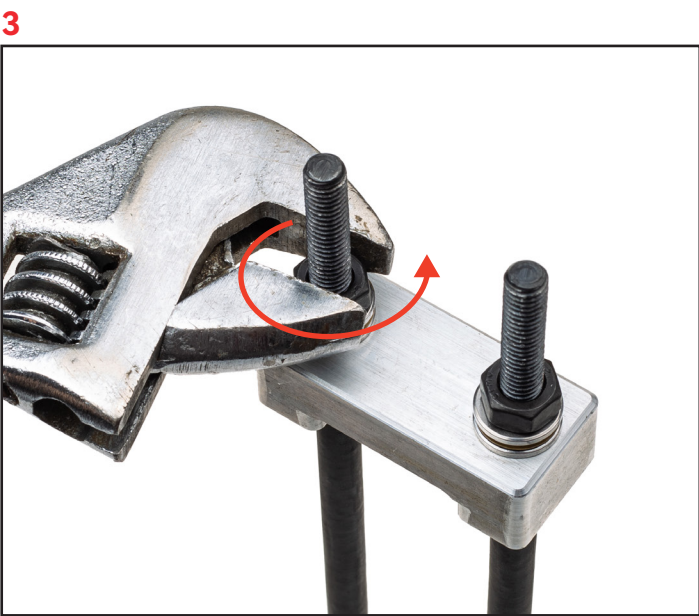



·先用2.5mm內六角螺絲刀拆下底板的兩顆螺絲，再取下底板。
·First, use a 2.5mm hex key to remove the two screws on the base plate, then take off the base plate.
·Be careful when removing the base plate, as the spring inside the magazine may eject parts. Make sure to release the gas before disassembly.

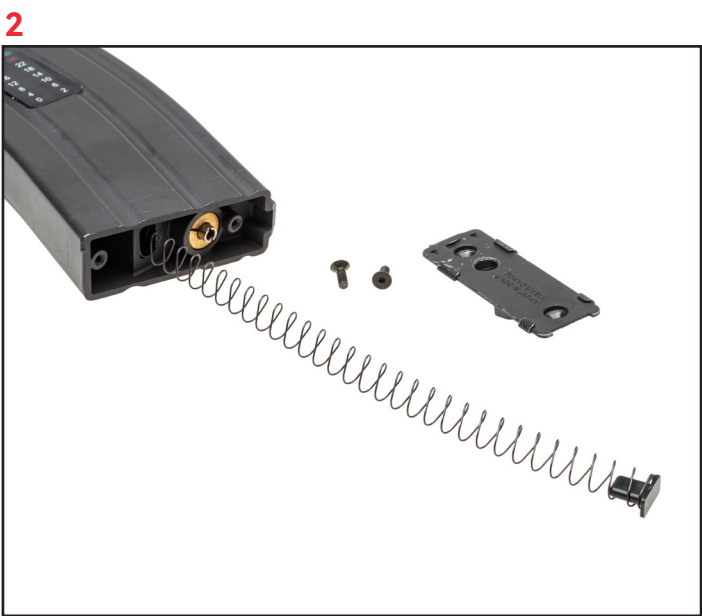

·如圖3所示，將工具頂部的兩顆螺母擰鬆，並將頂部的壓塊調高。接著，按圖4所示的方向放入彈匣。
·As shown in Figure 3, loosen the two nuts on top of the tool and raise the pressure block. Then, insert the magazine in the direction indicated in Figure 4.



·如圖5所示，將彈匣底部穩固放置於工具底部的壓塊上。接著如圖6所示，將上方壓塊壓在彈匣頂部的中間位置。
·As shown in Figure 5, securely place the bottom of the magazine on the lower pressure block of the tool. Then, as shown in Figure 6, press the upper pressure block down onto the center of the magazine top.

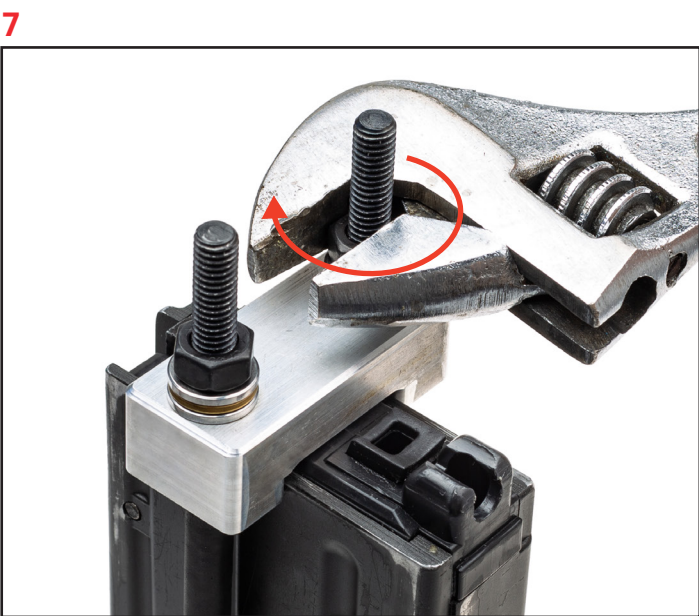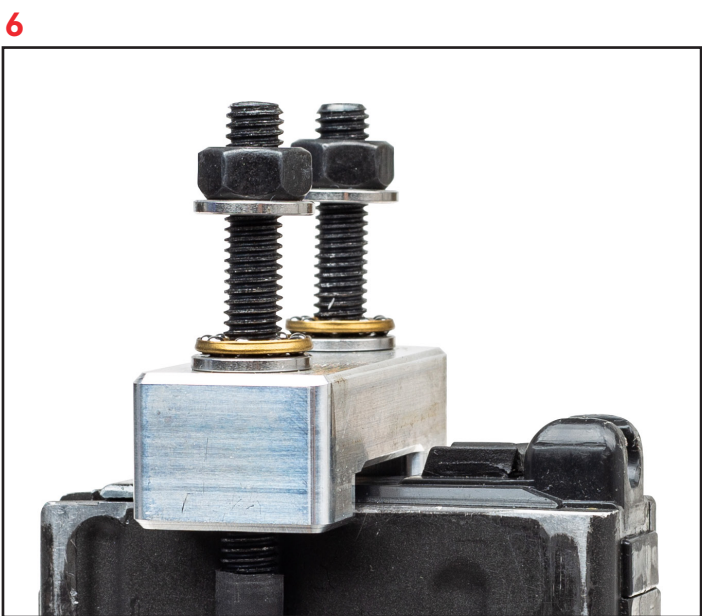

·使用扳手將頂部的螺母擰緊，以固定壓塊。如圖8所示，即完成工具的安裝。
·Use a wrench to tighten the top nuts and secure the pressure block. As shown in Figure 8, the tool installation is now complete.



·工具安裝完成後，即可將彈匣的兩顆銷釘敲出，接著便可將彈匣外殼拆出。
·Once the tool is installed, drive out the two pins on the magazine, then separate the magazine housing.



使用工具後
After using the tool



使用工具前
Before using the tool



·此工具在重新安裝彈匣外殼時尤為實用，可輔助對齊外殼與彈匣芯之間的銷釘孔。
·This tool is especially useful when reinstalling the magazine housing, as it helps align the pin holes between the housing and the magazine core.