

M4-拆卸扳機組件 M4-TRIGGER GROUP DISASSEMBLY



·先退彈並拆卸彈匣、敲出兩條銷釘，分離槍上下身。
· First, unload and detach the magazine, knock out the two pins, and separate the upper receiver from the lower receiver.

1



·確保擊錘處以待擊狀態。
· Ensure the hammer is in the cocked position.

2



3



·將火力選擇鈕調解至SEMI和AUTO之間，從另一邊把選擇鈕推出，並旋轉取出選擇鈕。
· Align the fire selector lever between SEMI and AUTO. Then, push the lever shaft out from the opposite side. Finally, rotate and remove the selector lever assembly.

4



5



·逆時針取出彈匣釋放鈕，並拆出相關組件。
· Turn the magazine release button counterclockwise to remove it, then remove the related components.

6



7



·敲出固定銷(1)，用2.5mm 內六角螺絲刀取出扳機組內的六角螺絲(2)。
· Drift out pin (1), then use a 2.5mm Hex Wrench to remove the hex screw (2) inside the trigger assembly.

8



7



·緩緩從槍下身取出扳機組，即可對扳機組件進行保養或更換新的扳機組。
· Gently extract the trigger assembly from the lower receiver. The trigger assembly can now be serviced or replaced.

8



安裝關鍵點 CRITICAL INSTALLATION POINTS

保養完成後，請遵循拆卸教程逆向組裝，以下為組裝關鍵點。
After maintenance is completed, please follow the disassembly tutorial to reverse assemble. The following are the key points of assembly



·敲入固定銷時要注意銷釘的方向，如圖所示。
· When driving in the retention pin, ensure correct orientation per diagram (1).

·裝回扳機組時，請按住兩邊的零件，以防掉落。

· Press and hold the components on both sides while reinstalling the trigger assembly to prevent any falling.



·裝回火力選擇鈕時，要指向SEMI和AUTO之間，並且需要工具輔助推開定位銷，再順勢裝好選擇鈕。
· When reinstalling the fire selector lever, align it between SEMI and AUTO. Use a tool to depress the detent pin, then slide the lever into position.

